YASHICA

FX-3
FX-7

ASSEMBLING CHART

YASHICA CO., LTD.
TOKYO JAPAN

147 148

No.1

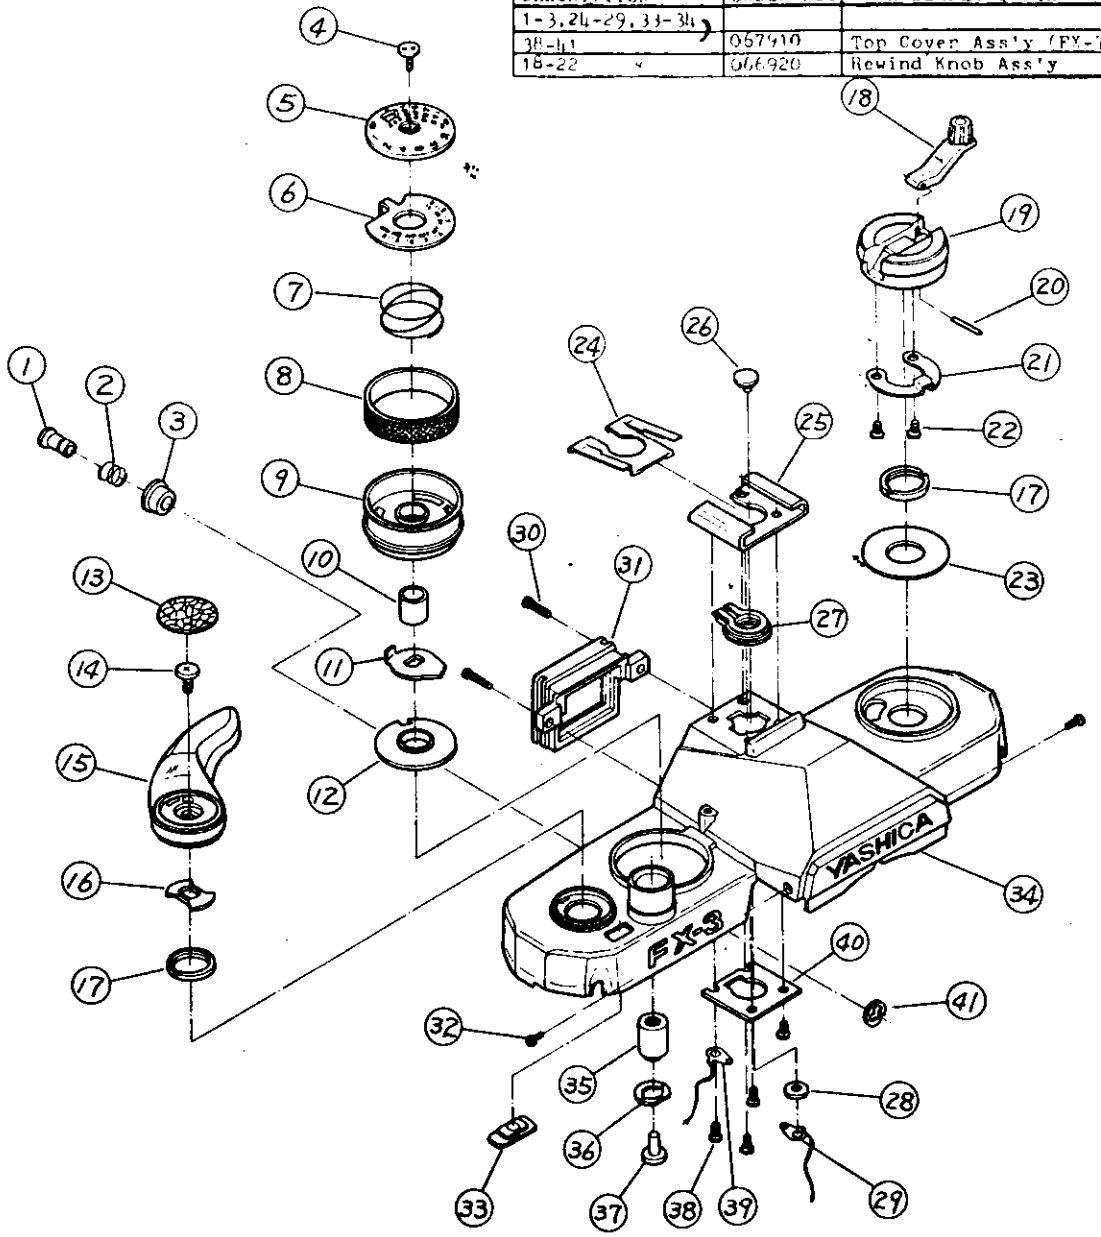

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
1-3,24-29,33-34)		
38-41)	067910	Top Cover Ass'y (FX-7)
18-22 〃	066920	Rewind Knob Ass'y

	PARTS NO.	DESCRIPTION	Q'TY
1	147446	EC Button	1
2	318316	Checker Button Spring	1
3	147441	EC Button Holder	1
4	133298	Name Plate S.S.	1
5	147415	Shutter Dial Name Plate	1
6	133295	ASA Name Plate	1
7	147416	ASA Spring	1
8	147442	S. Dial Cover	1
9	147418	S. Dial	1
10	147409	ASA Color	1
11	147417	ASA Stopper	1
12	066309	S. Contact Plate Ass'y	1
13	147660	Winding Lever Leather	1
14	66001037	Winding Lever S.S.	1
15	147651	Winding Lever	1
16	147652	Winding Lever Base	1
17	147659	Top Cover Nut	2
18	147643	Crank Arm Ass'y	1
19	139368	Rewinding Knob	1
20	66670830	Crank Arm Pin	1
21	139373	Crank Arm Spring	1
22	69112554	Crank Arm Spring S.S.	1
23	147681	Rewind Shaft Cover	1
24	134128	Shoe Plate Spring (FX-3)	1
24	132128(B)	Shoe Plate Spring (FX-7)	1
25	132136	Accessory Shoe	1
26	★	Shoe Point	1
27	★	Shoe Contact	1
28	★	Shoe Point Washer	1
29	★	Lug Plate	1
30	61915529	Top Cover S.S. (2) (FX-3)	2
30	61915521	Top Cover S.S. (FX-7)	2
31	147851	Eye-Piece Frame	1
32	61903020	Top Cover S.S. (1) (FX-3)	2
32	61903021	Top Cover S.S. (FX-7)	2
33	147136	Film Counter Window	1
34	★	Top Cover (FX-3)	1
34	★	Top Cover (FX-7)	1
35	147419	Shutter Button (FX-3)	1
35	148444	Shutter Button (FX-7)	1
36	147420	Shutter Button Stopper	1
37	147421	Shutter Button Shaft	1
38	61913022	Shoe Reinforcement Plate S.S.	4
39	143112	Shoe Lug Plate	1
40	147151	Shoe Reinforcement Plate	1
41	66102525	E. Ring	1

DECRIPTION	ORDER NO.	ASSEMBLY PARTS
26 - 29	066461	Shoe Contact Ass'y
35 - 36	066165	Shutter Button Ass'y(FX-3)
35 - 36	067165	Shutter Button Ass'y(FX-7)
1 - 3, 41	066587	EC Button Holder Ass'y
1-3,24-29,33-34)		
38-41)	066910	Top Cover Ass'y(FX-3)

NOTE : (Parts with marked "★" are not Available)

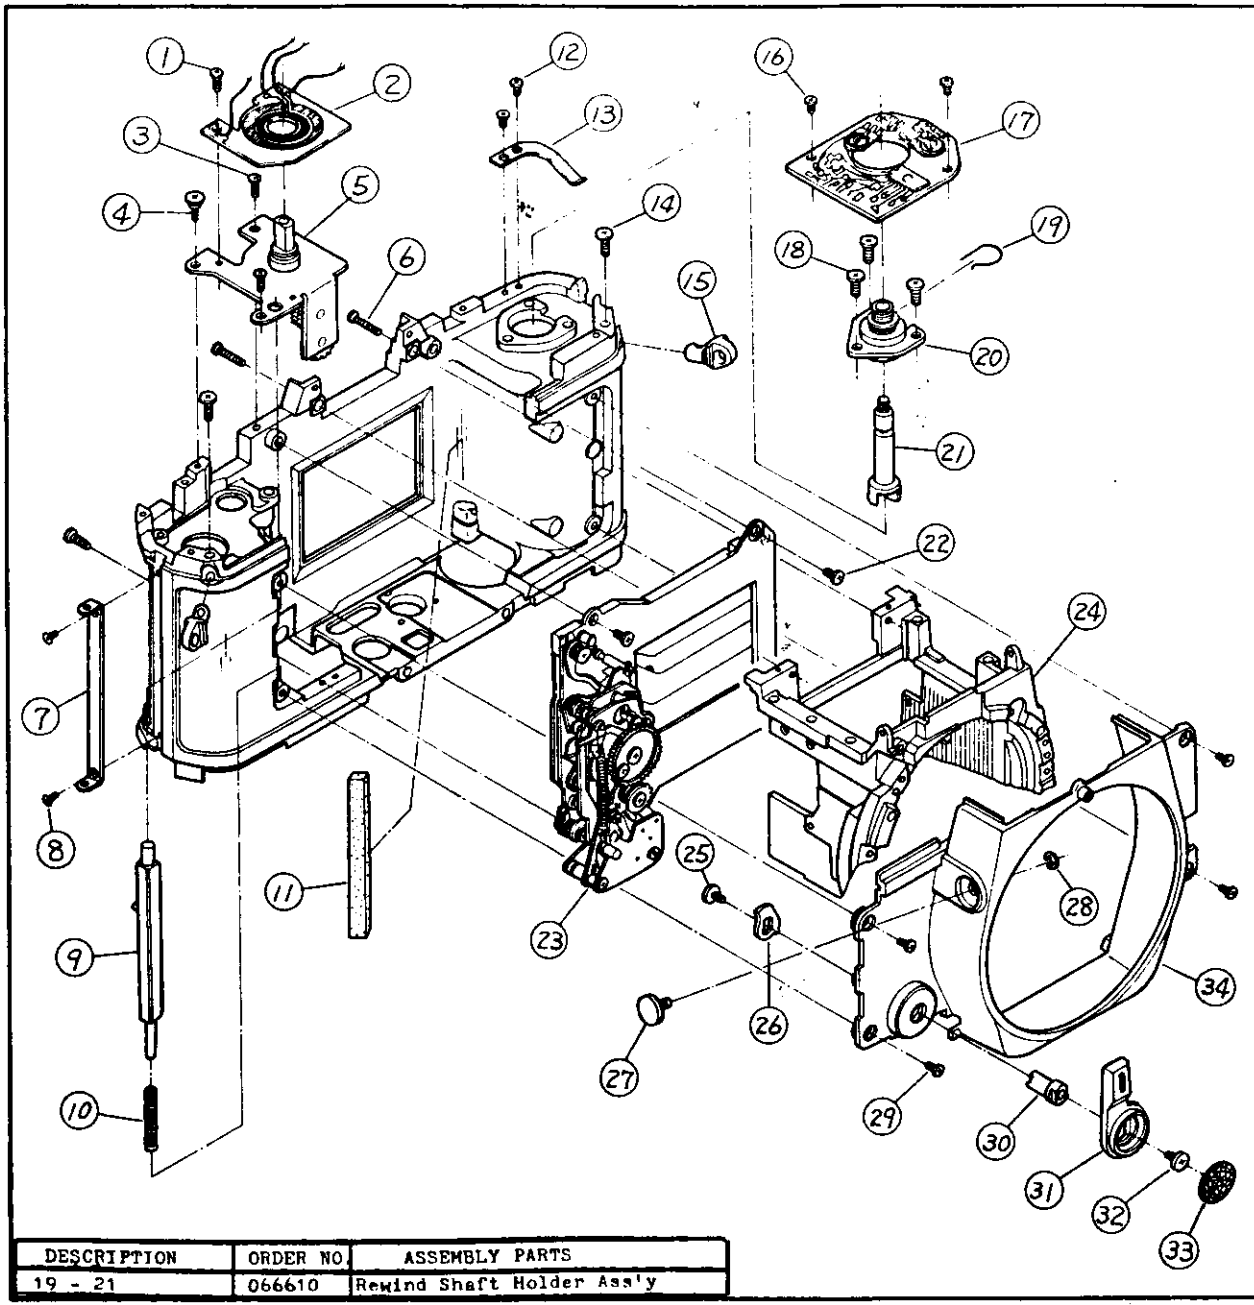

	PARTS NO.	DESCRIPTION	Q'TY
1	61914022	S. Base Plate S.S.	1
2	066593	S. Base Plate Ass'y	1
3	61914022	S. Base Plate S.S.	2
4	147816	Lock Lever Shaft	1
5	066445	S. Base Plate Ass'y	1
6	61927024	Mirror Box S.S.	2
7	139148	Hinge Shaft Holder	1
8	61812524	Hinge Shaft Holder S.S.	2
9	147422	Shutter Shaft	1
10	147423	Shutter Shaft Spring	1
11	147206	Shutter Moquette	1
12	61912224	Lock Plate Spring S.S.	2
13	147142	Lock Plate Spring	1
14	69226054	Strap Holder S.S.	2
15	65005112	Strap Holder	2
16	61912524	Amplifier S.S.	2
17	066503	Amplifier Ass'y	1
18	6392524	Rewind Shaft Holder S.S.	1
19	147680	Rewind Shaft Spring	1
20	147677	Rewind Shaft Holder	1
21	147678	Rewind Shaft	1
22	61924022	Shutter S.S.	1
23	147201	Complete Shutter	1
24		Mirror Box	1
25	66001023	Self Charge Plate S.S.	1
26	147833	Self Charge Plate	1
27	147803	Set Off Button	1
28	66101225	E. Ring	1
29	63913024	Mount Cover S.S.	4
30	132819	Self Lever Shaft	1
31	132823	Self Lever	1
32	66001027	Self Lever S.S.	1
33	147834	Self Lever Leather	1
34	147801	Mount Cover	1

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
19 - 21	066610	Rewind Shaft Holder Ass'y

NOTE : (Parts with marked "★" are not Available)

147 148

No.3

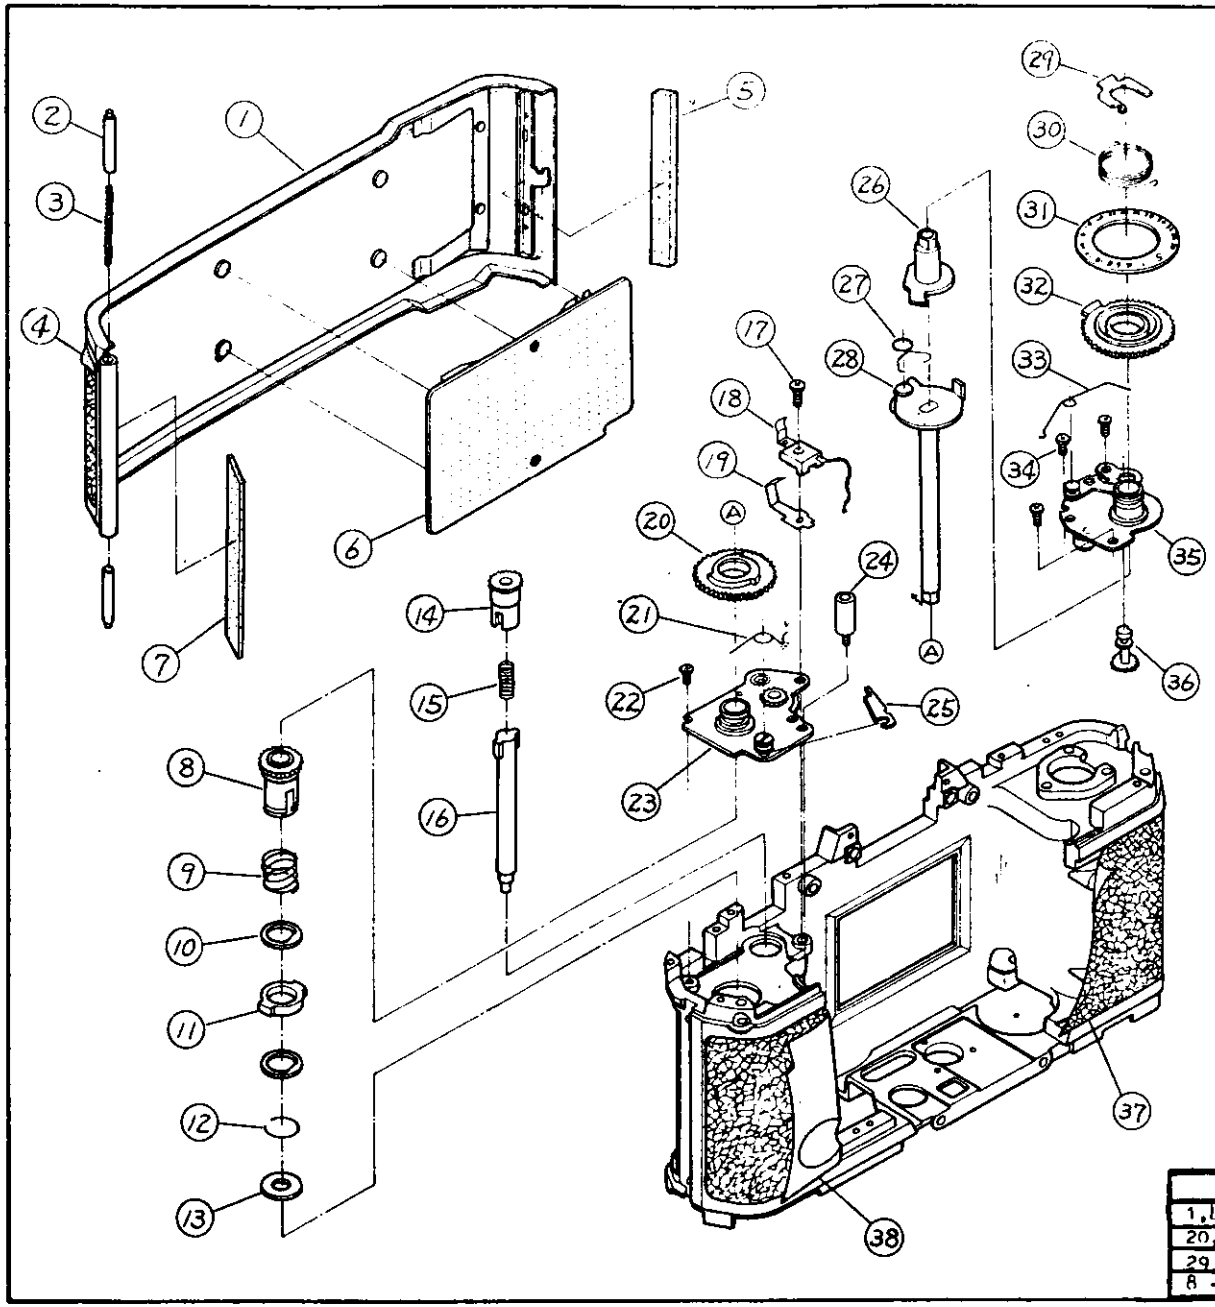

	PARTS NO.	DESCRIPTION	Q'TY
1	066286	Back Cover Ass'y	1
2	147108	Hinge Shaft	2
3	131133	Hinge Shaft Spring	1
4	147110	Back Cover Leather	1
5	132108	Back Cover Lock Moquette	1
6	066287	Pressure Plate Ass'y	1
7	147156	Hinge Moquette	1
8	147616	Spool Gear	1
9	147640	Friction Spring	1
10	139640	Friction Washer	2
11	139639	Friction Plate	1
12	147642	Spring Cover Stopper	1
13	60284110	Inside Spool Washer	1
14	139644	Sprocket Gear	1
15	139650	Sprocket Spring	1
16	139647	Sprocket Shaft	1
17	63915524	EC Switch S.S.	1
18	066675	EC Switch Ass'y	1
19	147425	EC Contactor (2)	1
20	147603	A Gear	1
21	147619	A Gear Stopper Spring	1
22	61913024	W. Base Plate S.S.	1
23	066200	W. Base Plate Ass'y	1
24	147620	S. Base Plate Post	1
25	147611	A Gear Stopper	1
26	066645	Lever Feeding Plate Ass'y	1
27	147625	Rachet Claw Spring	1
28	066615	Winding Stopper Ass'y	1
29	147866	Counter Spring Post	1
30	147867	Counter Spring	1
31	147864	Counter Name Plate	1
32	147865	Counter Gear	1
33	147870	Counter Reverse Lever Spring	1
34	61913024	Counter Base Plate S.S.	3
35	066830	Counter Base Plate Ass'y	1
36	139887	Counter Gear (1)	1
37	147115	Front Leather(Right)	1
38	147116	Front Leather (Left)	1

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
1,4,5,7.	066286	Back Cover Ass'y
20, 23	066200	W. Base Plate Ass'y
29,30,32,35	066830	Counter Base Plate Ass'y
8 - 12	066601	Spool Gear Ass'y

NOTE : (Parts with marked "★" are not Available)

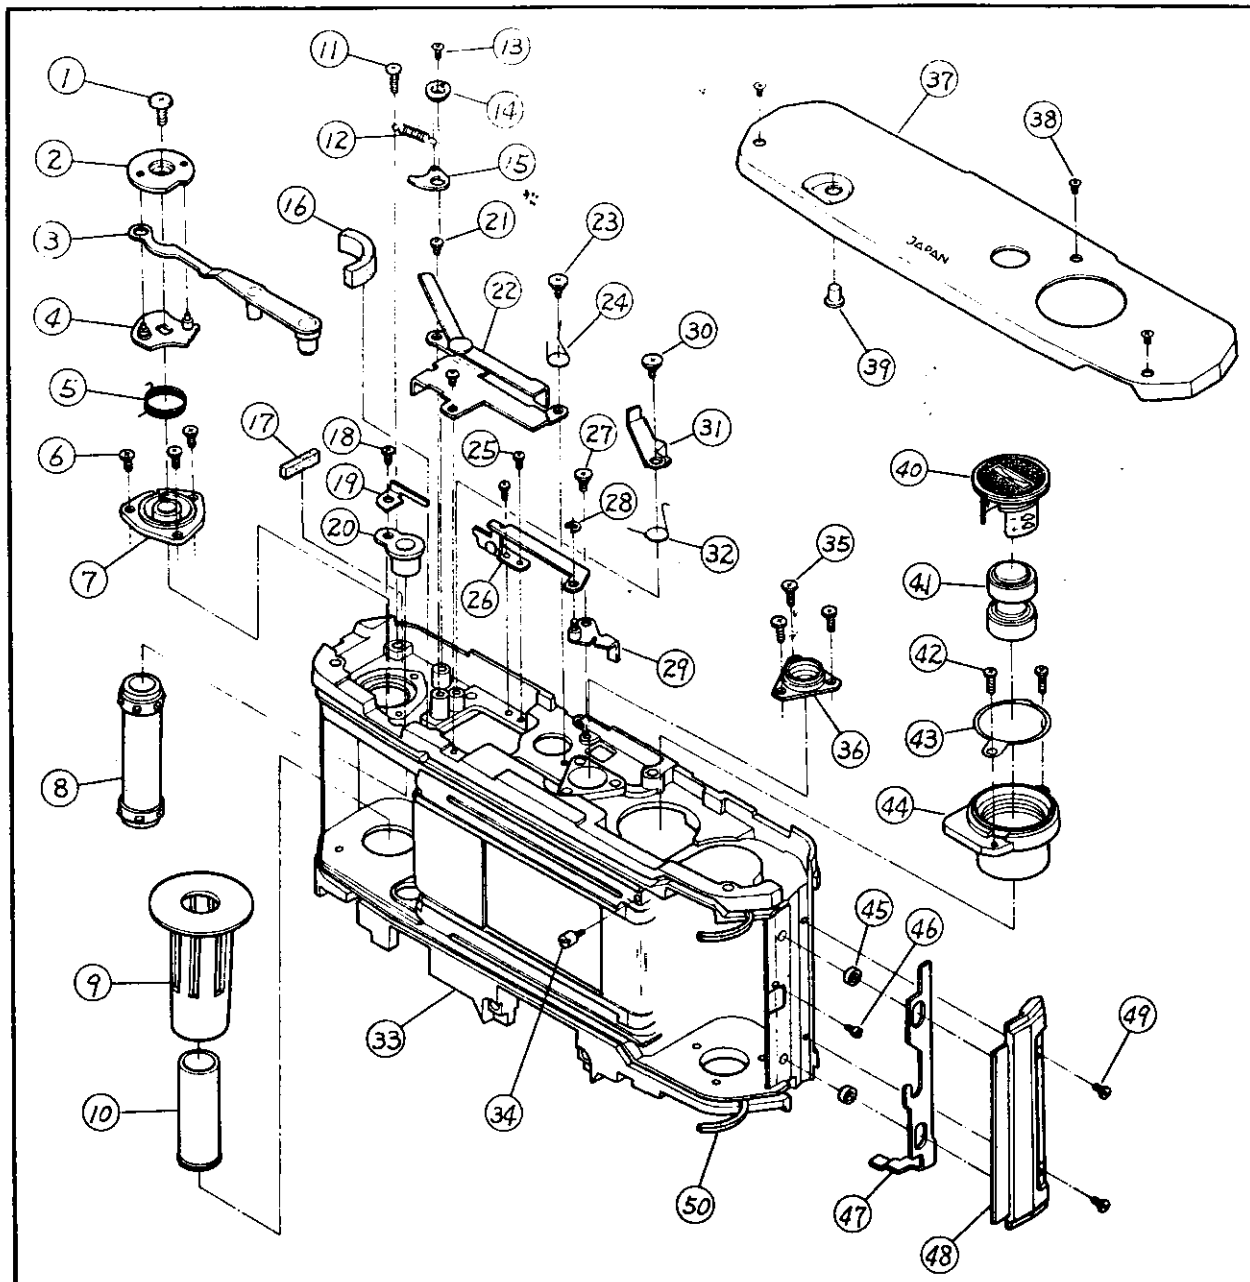

	PARTS NO.	DESCRIPTION	Q'TY
1	66001037	Set Cam Fixer S.S.	1
2	147610	Set Cam Fixer	1
3	066711	SM Set Lever Ass'y	1
4	066617	Set Cam Plate Ass'y	1
5	147632	Winding Spring	1
6	63913024	Winding Shaft Holder S.S.	3
7	147631	Winding Shaft Holder	1
8	139648	Sprocket	1
9	139641	Outside Spool	1
10	305658	Inside Spool	1
11	61915524	Anti-Rewind Spring Post	1
12	147636	Anti-Rewind Claw Spring	1
13	61814024	Anti-Rewind Claw Collar S.S.	1
14	147637	Anti-Rewind Claw Collar	1
15	147638	Anti-Rewind Claw	1
16	147203	Shutter Moquetto (1)	1
17	147205	Shutter Moquetto (2)	1
18	63912524	Sprocket Reverse Spring S.S.	1
19	147630	Sprocket Reverse Spring	1
20	139646	Sprocket Metal	1
21	61913024	Cocking Arm Fixer S.S.	2
22	066616	Cocking Arm Fixer Ass'y	1
23	147437	SR Lever Shaft (3)	1
24	147614	Winding Stopper Lever Spring	1
25	61912224	SR Lever (1) Support S.S.	2
26	066306	SR Lever (1) Support Ass'y	1
27	147437	SR Lever (3) Shaft	1
28	66101225	E. Ring	1
29	066307	SR Lever (3) Ass'y	1
30	147437	SR Lever (3) Shaft	1
31	147439	SR Lock Lever	1
32	147640	SR Lock Spring	1
33		Body	1
34	147105	Film Guide Pin	1
35	61924022	Tripod Socket S.S.	1
36	139144	Tripod Socket	1
37	147120	Bottom Cover (FX-3)	1
37	148121	Bottom Cover (FX-7)	1
38	131391	Bottom Cover S.S.(FX-3)	3
38	61812521	Bottom Cover S.S. (FX-7)	3
39	139651	Sprocket Button	1
40	065930	Battery Cap Ass'y	1
41		Battery (G - 13)	2
42	61914522	Battery Case S.S.	2
43	139154	Battery Case Contact Plate(B)	1
44	066110	Battery Case Ass'y	1
45	147107	Lock Plate Collar	2
46	131119	Back Cover Lock Claw Guide	1
47	139120	Back Cover Lock Plate	1
48	147106	Lock Plate Cover	1
49	61912524	Lock Plate Cover S.S.	2
50	147153	Body Light-Proof Moquetto	2

147 148

NOTE : (Parts with marked "★" are not Available)

No.4

147 148

No.5

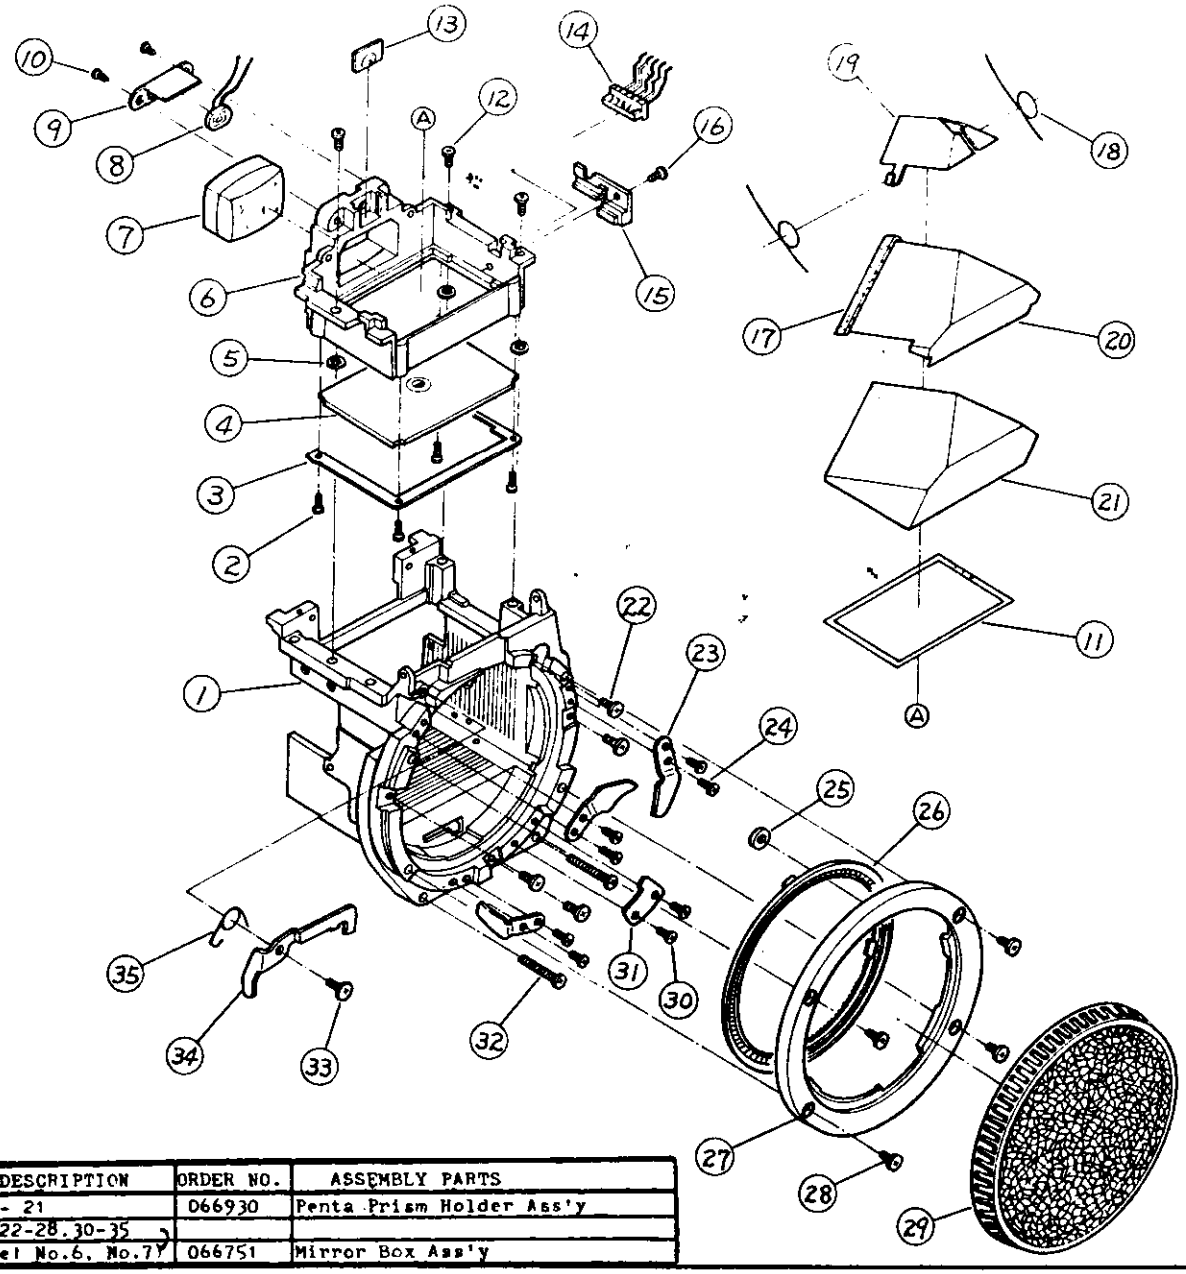

	PARTS NO.	DESCRIPTION	Q'TY
1	★	Mirror Box	1
2	69103564	Focusing Glass Fixer S.S.	4
3	147840	Focusing Glass Fixer	1
4	147839	Focusing Glass	1
5	60111810	60121810, 60131810 (Select)	-
6	147835	Penta Prism Holder	1
7	147848	Eye-Piece Lens	1
8	147503	S.P.D.	1
9	147847	S.P.D. Fixer	1
10	69102564	S.P.D. Fixer S.S.	2
11	147841	Finder Mask Frame	1
12	61914024	Penta Prism Holder S.S.	3
13	142819	Light-Gathering Lens	1
14	147504	L E D	1
15	147842	LED Fixer	1
16	69103564	LED Fixer S.S.	1
17	147881	Penta Dust-Proof Moquette	1
18	147838	Penta Prism Fixer Spring	2
19	139862	Penta Prism Fixer	1
20	147837	Penta Cap	1
21	147836	Penta Prism	1
22	66001041	F. Stop Connecting Ring S.S.	4
23	139812	Mount Spring	3
24	61913024	Mount Spring S.S.	6
25	132489	Insulation Collar	1
26	139823	F. Stop Connecting Ring	1
27	147821	Body Mount	1
28	131177	Body Mount S.S.	4
29	128118	Body Cap	1
30	61913024	Mount Stopper S.S.	2
31	139813	Mount Stopper	1
32	132143	Strap Holder S.S.	2
33	147816	Lock Lever Shaft	1
34	139815	Lock Lever	1
35	147817	Lock Lever Spring	1

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
2 - 21	066930	Penta Prism Holder Ass'y
1.22-28.30-35		
(See! No.6, No.7)	066751	Mirror Box Ass'y

NOTE : (Parts with marked "★" are not Available)

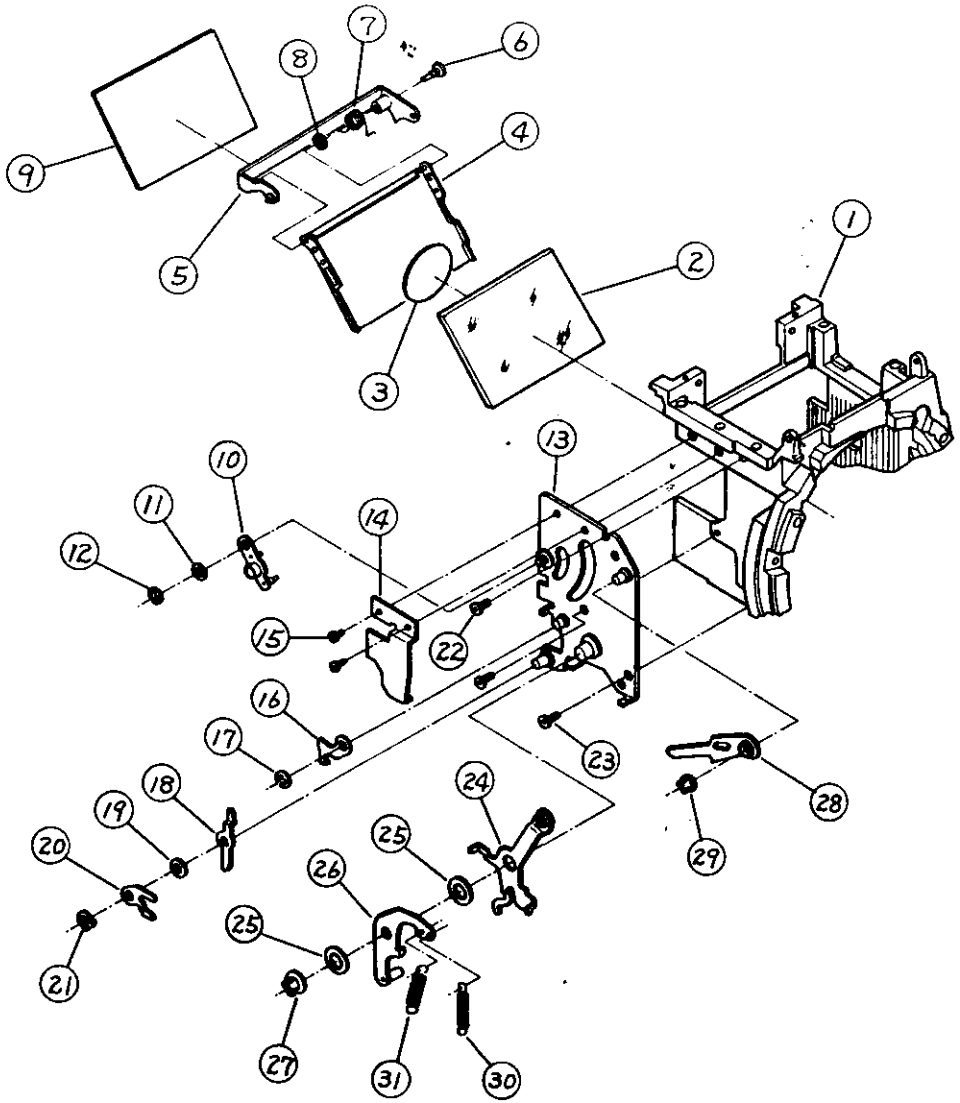

	PARTS NO.	DESCRIPTION	Q'TY
1	★	Mirror Box	1
2	147791	Mirror	1
3	139774	Mirror Tape	1
4	065741	M Frame Ass'y	1
5	065253	ML-3 Ass'y	1
6	139796	M. Pin (2)	1
7	139798	M. Spring	1
8	60111513	60121513, 60131513 (Select)	-
9	139799	M. Frame Light-Proof Sheet	1
10	065214	MCL-4 Ass'y	1
11	60311510	MCL-4 Washer	-
12	66101225	E. Ring	1
13	066195	MC Base Plate Ass'y	1
14	147773	MC Light-Proof Plate	1
15	61901424	MC Light-Proof Plate S.S.	2
16	139770	MCL-5	1
17	66101525	E. Ring	1
18	139771	MCL-6	1
19	147766	MCL-6,7 Spacer	1
20	147772	MCL-7	1
21	66172024	E. Ring	1
22	61912024	MC Base Plate Ass'y S.S.	2
23	61812524	" "	1
24	065212	MCL-2 Ass'y	1
25	60223125	MCL-1,2. Fixer Washer	2
26	065297	MCL-1 Ass'y	1
27	66172024	E. Ring	1
28	065213	MCL-3 Ass'y	1
29	66172024	E. Ring	1
30	139761	MC Restore Spring	1
31	139760	MC Driving Spring	1

DESCRIPTION	ORDER NO	ASSEMBLY PARTS
2 - 9	066741	M. Frame Ass'y
13,16-21,24-31	066195	MC Base Plate Ass'y
1 - 31(See!No.5, No.7)	066751	Mirror Box Ass'y (S-M&M2)

147 148

NOTE : (Parts with marked "★" are not Available)

No.6

147 148

No.7

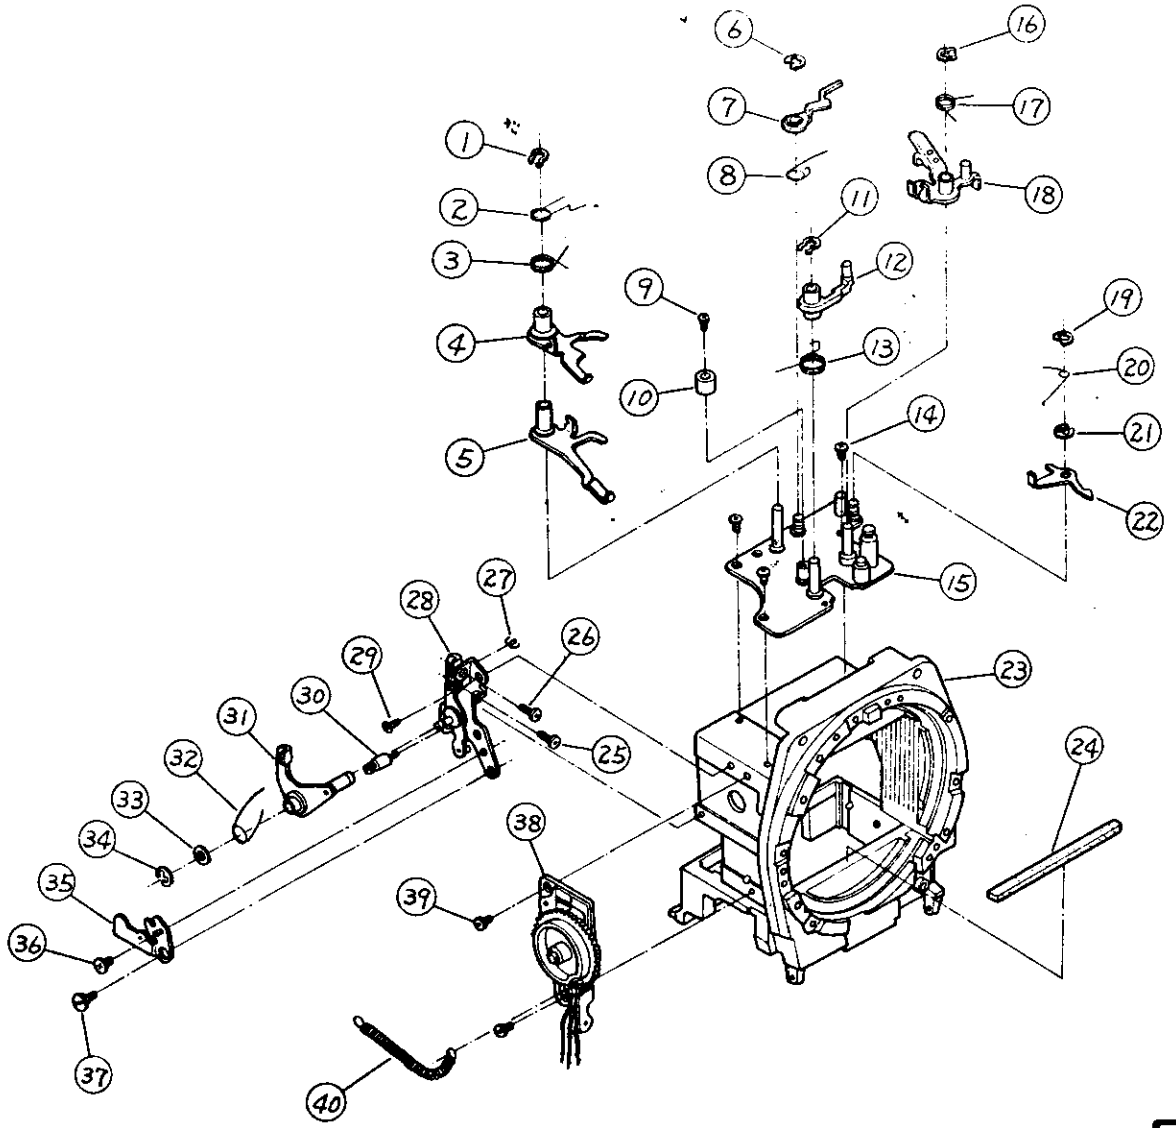

	PARTS NO.	DESCRIPTION	Q'T
1	66172024	E. Ring	1
2	139721	QRL-2 Spring	1
3	139724	QRL-3 Spring	1
4	065202	QRL-2 Ass'y	1
5	065203	QRL-3 Ass'y	1
6	66101525	E. Ring	1
7	065205	QRL-5 Ass'y	1
8	139730	QRL-5 Spring	1
9	63902024	QR Stoppen S.S.	1
10	147710	QR Stopper	1
11	66172024	E. Ring	1
12	147725	QRL-4	1
13	147727	QRL-4 Spring	1
14	61912024	QR Base Plate Ass'y S.S.	3
15	066197	QR Base Plate Ass'y	1
16	66172024	E. Ring	1
17	139716	QRL-1 Spring	1
18	065201	QRL-1 Ass'y	1
19	66101525	E. Ring	1
20	139732	QRL-6 Spring	1
21	66101525	E. Ring	1
22	139731	QRL-6	1
23		Mirror Box	1
24	147787	Mirror Cushion	1
25	63913024	ML-4 S.S.	1
26	63914022	ML Base Plate S.S.	1
27	139833	ML Base Plate Spring	1
28	065250	ML Base Plate Ass'y	1
29	61812524	ML Base Plate Ass'y S.S.	1
30	147831	Aperture Resistor Spring Post	1
31	065255	ML-5 Ass'y	1
32	139808	ML-4,5 Spring	1
33	60112110	128666, 128667 (Select)	-
34	66101525	E. Ring	1
35	139809	ML-6	1
36	63911524	S.S.	1
37	139834	ML-6 S.S.	1
38	147006	AVR Ass'y	1
39	61912224	AVR Ass'y S.S.	2
40	147830	Aperture Resistor Spring	1

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
1 - 22	066197	QR Base Plate Ass'y
25 - 34	065250	ML Base Plate Ass'y
1-34(Sec!No.5,No.6)	066751	Mirror Box Ass'y

NOTE : (Parts with marked "★" are not Available)